

SOUNDSPHERE[®]

L O U D S P E A K E R S



NEPTUNE

Q-8 | OWNER'S MANUAL

Q-8 | OWNER'S MANUAL

Please read the following instructions carefully before installing your Soundsphere® speaker. If you have any questions regarding installation that are not answered in the following directions, please contact your local sound contractor or the Soundsphere®/MSE Audio® technical support team. Contact information can be found on the back of the manual.

General Information

Maximum Amplifier Power	100 Watts RMS
Nominal Impedance	8 ohms

Wiring

Amplifier connection is via flying leads. Connect the positive (+) amplifier lead to the RED input wire. Connect the negative (-) amplifier lead to the BLACK wire. Secure connections using wire nuts, etc.

Mounting

Hanging Kit

Mount using one of the following methods:

- a) Properly secured wire rope with a minimum breaking strength of 225 lbs. (for a 10:1 safety factor).
- b) Beam clamp with proper load rating.

It is recommended to use a secondary wire rope support around one of the Q-8 legs. **Do not use rope for mounting.** The use of chain is not recommended unless rated for suspension of loads greater than or equal to 225 lbs (for a 10:1 safety factor).

Surface Mount Bracket

Secure the bracket to the hard surface using proper hardware. Secure the Q-8 to the bracket using the washers and nylon locknuts provided. It is recommended to use a secondary wire rope support around one of the Q-8 legs and through an unused bracket hole.

Warranty

Soundsphere loudspeakers carry a 5 year limited warranty. See warranty sheet for details and limitations.

Replacement Parts

8" 100 Watt coaxial loudspeaker driver with crossover.

Order Model Number CX-8

Always check local requirements for overhead suspension of loudspeakers.